



## FreePBX Configuration Guide with EdgeMarc

This document does not cover the installation of the FreePBX distribution itself and assumes knowledge of the system build and administration, to include administration access to FreePBX 2.210 running Asterisk 11.2.1 via web browser and secured shell or console.

It should be noted that these test results are applicable to FreePBX variants running Asterisk 11.2.1:

- › Elastix
- › PBX in a Flash
- › AsteriskNOW
- › Trixbox CE (END OF LIFE)

### Configuration Notes for FreePBX 3.211.63-6 32-bit:

The FreePBX 3.211.63-6 32-bit ISO build ships with a deprecated macro coded in the “extensions\_additional.conf” file under /etc/asterisk. The deprecated macro is:

- › cc\_callback\_macro

The correct/current callback macro for this release is:

- › cc\_callback\_sub

The substitution must be placed in the “extensions\_custom.conf” file so it will not be over-written during a system reload or restart:

From the command-line (or remote shell):

```
cd /etc/asterisk
```

```
grep cc_callback_macro extensions_additional.conf >> extensions_custom.conf
```

```
sed -i "s/cc\_callback\_macro/cc\_callback\_sub/g" extensions_custom.conf
```



## REQUIRED INFORMATION (Provided by MegaPath)

Host: \_\_\_\_\_

Number of Trunks: \_\_\_\_\_

Pilot Number: \_\_\_\_\_

Password: \_\_\_\_\_

The Edgemarc SIP ALG (ALG) is used to proxy SIP registrations on the behalf of the PBX. The FreePBX SIP trunk host parameter is configured to point to the LAN-side IP address of the ALG.

The following screen capture is included as a reference.

**General Settings**

---

Trunk Name: Megapath  
Outbound CallerID: 7039399245  
CID Options: Allow Any CID  
Maximum Channels:   
Asterisk Trunk Dial Options: Tt  Override  
Continue if Busy:  Check to always try next trunk  
Disable Trunk:  Disable

**Dialed Number Manipulation Rules**

---

(prepend) + prefix | match pattern    
   
Dial Rules Wizards: (pick one)  
Outbound Dial Prefix:

**Outgoing Settings**

---

Trunk Name: Megapath

PEER Details:

```
disallow=all
allow=ulaw&g729&g722
canreinvite=no
insecure=port,invite
dtmfmode=rfc2833
host=192.168.1.254
username=7039399245
secret=#####
type=peer
```

Figure: SIP trunk configuration with EdgeMarc SIP ALG

**NOTE:** The FreePBX host DOES NOT send from-domain information. This task is now relegated to the ALG.



Trunk Name: **Megapath**

Outbound CallerID: **<Pilot Number>**

Maximum Channels: **<Number of Trunks>**

**PEER Details:**

```
disallow=all
allow=ulaw&g729&g722
canreinvite=no
insecure=port,invite
dtmfmode=rfc2833
username=<Authentication User Name>
host=<LAN-side IP address of Edgemarc SIP ALG>
secret=<Authentication User Name Password>
type=peer
```

**NOTES:**

- › To limit the allowed codec to G711 only, use the following “allow” statement:  
**allow=ulaw**
- › To limit the allowed codec to G729 only, use the following “allow” statement:  
**allow=g729**

In the Registration String text box, enter the following registration string:

```
<Authentication User Name>:<secret>@<Edgemarc LAN-Side IP Address>/<Authentication
```